

Vent Installation Instructions

1. Clean and clear area when vent is to be fitted.
2. Check vent fits in void to be filled.
3. Vent can be painted (paint not provided).
4. Squirt outdoor silicon sealant (not provided) on two opposite sides of vent and insert vent into void to be filled.
5. Apply outdoor silicon sealant around vent to hold in place.
6. If required using template indentations drill holes and secure with screws.



Tetral Industries – 2023

Contact for more information: info@tetral.co.nz or 03 379 2400