


Mactrac Curtain Changing Cassette

This unique system allows for the quick and easy removal and changing of bed screen curtains from floor level. The cassette is a section of track that can be removed with the curtain attached. The curtain can then be changed at ground level reducing the risk of working at heights. Prior experience is not required just follow the steps below.

Step 1:

- Ensure the cassette changer has the Unload Tines facing up

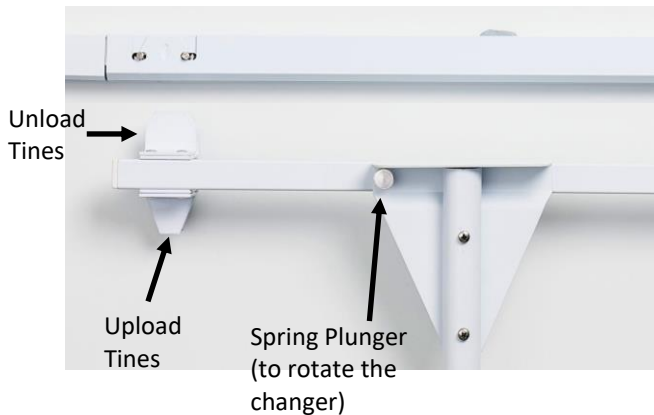

Step 2:

- Position the curtain changer at the section of the track containing the cassette.
- Align the Unload Tines between the double sets of stainless steel pins.
- Push up until the pins separate, releasing the cassette into the changer.
- Carefully lower the cassette changer to the workstation.
- Remove the cassette from the changer and replace the curtain.



Step 3:

- Pull the Spring Plunger on the cassette changer, rotate the changer 180°, and release the plunger. The Upload Tines should now face up.
- Insert the laundered curtain into the cassette track.
- Place the curtain and cassette into the cassette changer, then raise them up to the track.
- Push the Upload Tines between the pins. The cassette's catch will secure the pins, fixing the cassette to the track.
- Once you see or feel the cassette lock into place, remove the cassette changer from the track.

The installation process is now complete



Note:

Make sure the curtain is between the stainless steel pins when the curtain changer is introduced to the track.





Tetral Industries
94 Mowbray Street
Christchurch 8023
www.tetral.co.nz